



STANDAFD [vl.5]

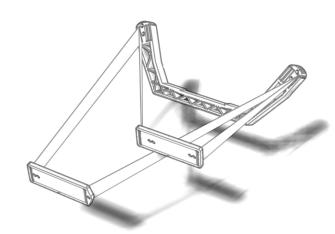


LIGHT [vi.6]



Quick start

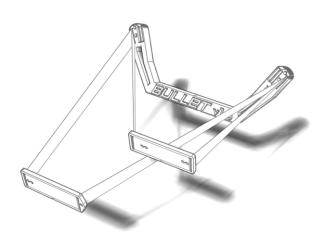

Quick start

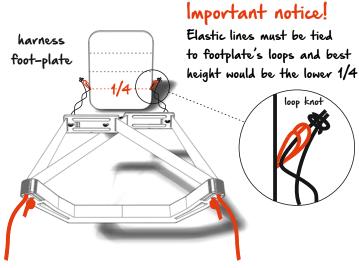

Basic tips.

- Speedbar layout and steps distance can be adjusted according to your preference. Try default before to change it.
- For best comfort first steps must be pushed with heel of foot.
- Keep your speedbar operational and update.
 Find spare parts on our online shop.
- For further informations please refer to user manual.

bullet-speedbar.com



harness foot-plate Elastic lines must be tied to footplate's loops and best height would be the lower 1/4 loop knot

Basic tips.

- Speedbar layout and steps distance can be adjusted according to your preference. Try default before to change it.
- For best comfort first steps must be pushed with heel of foot.
- Keep your speedbar operational and update. Find spare parts on our online shop.
- For further informations please refer to user manual.

bullet-speedbar.com

